

Infrastructure Mode Configuration

- 1) Press the Power button to turn your printer on.
 - If the Wi-Fi button is lit in blue, Infrastructure mode is already configured. You can close these instructions and continue with the installation.
 - If the Wi-Fi button is flashing blue, press and hold the Wi-Fi button until it turns white and then go to the next step.
 - If the Wi-Fi button is lit in white, go to the next step.




- 2) Connect the device and your printer using Wireless Direct Mode by selecting the printer's network name from the detected wireless networks.

Windows




iOS / Android OS

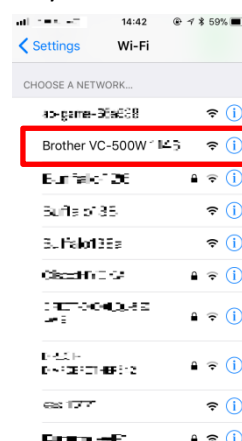


-
- If there is more than one VC-500W in your environment, select a VC-500W wireless network to confirm the last 4 digits are the same as the last 4 digits of the serial number on the label on the base of your printer.
-


3) Open a web browser window and type "192.168.0.1".

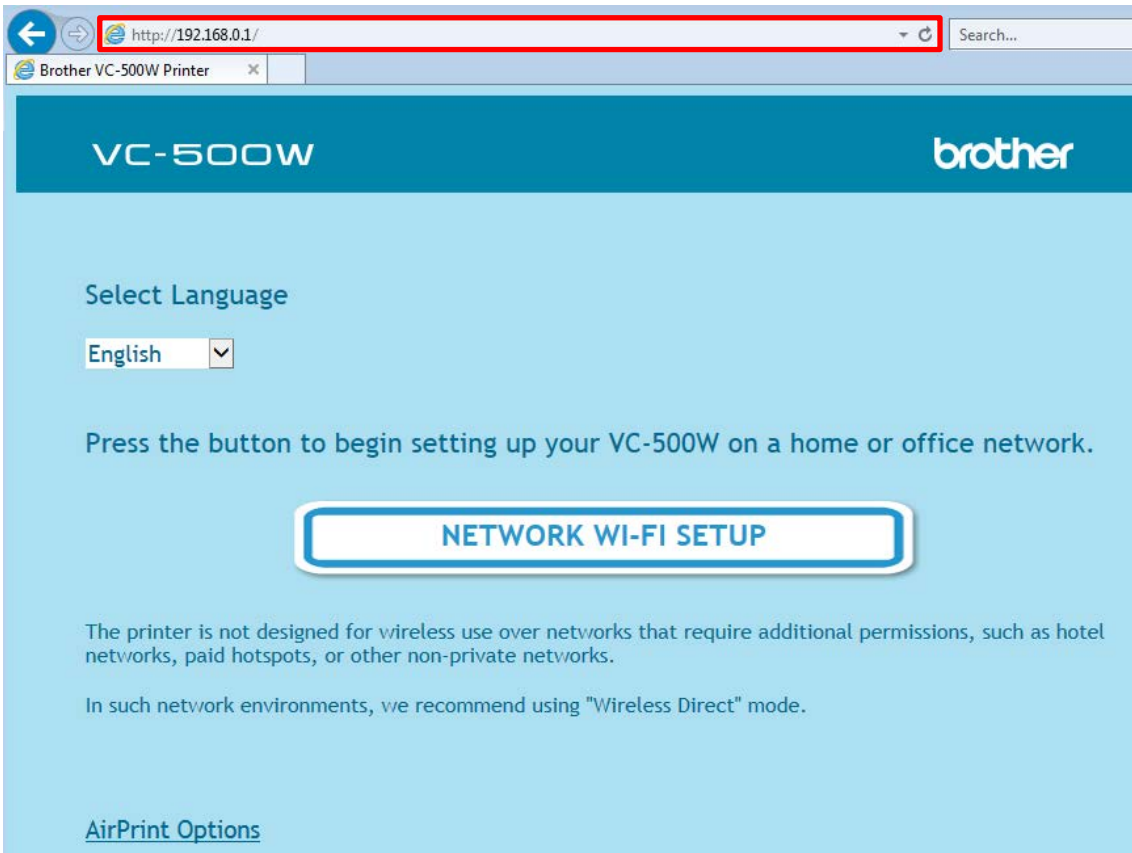


4) Select your language.

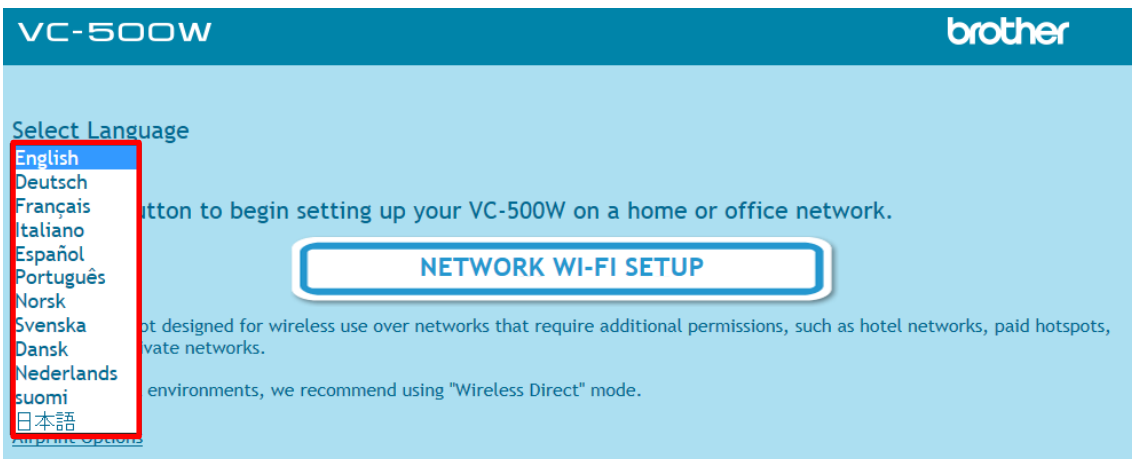

5) Click [NETWORK WI-FI SETUP].

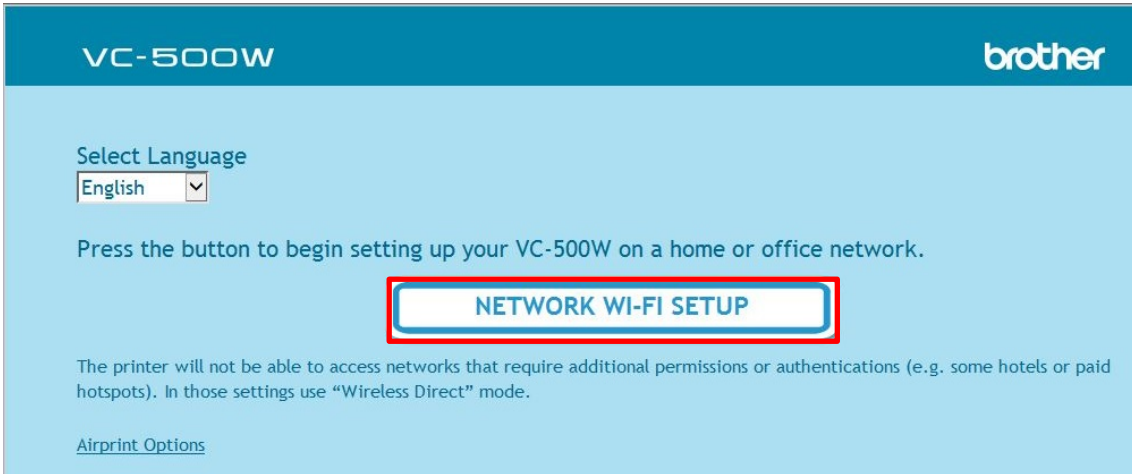

6) Scroll the sidebar and select your Wi-Fi network name.

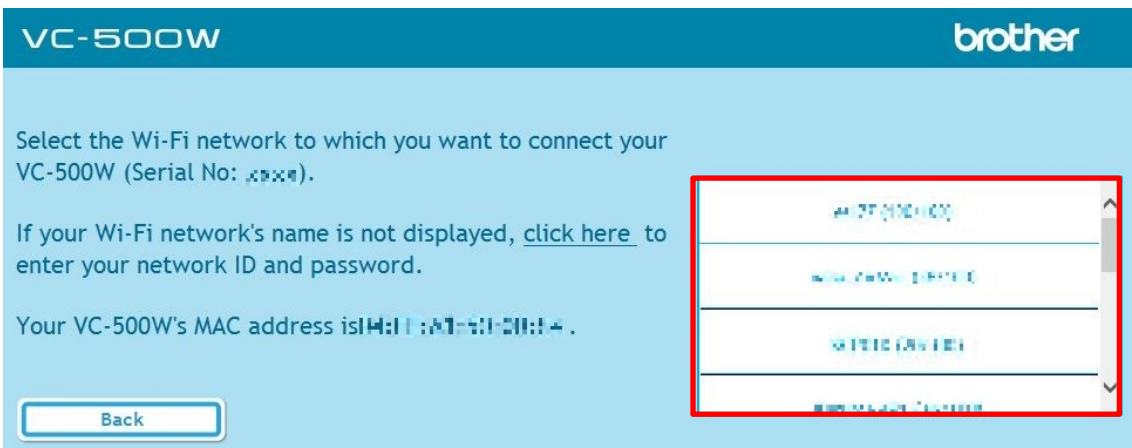

7) Enter the password of your Wi-Fi network name and click [Connect].



8) When the following screen appears, Infrastructure mode is configured. You can now close this window and continue with your printer's installation.

VC-500W **brother**

The Wi-Fi button will flash in blue, and then will turn solid blue.

If the Wi-Fi button is solid white, your printer could not join your Wi-Fi network. Try to connect again, and make sure that you are entering the correct password for your Wi-Fi network.

If successful, the app will connect to the printer to use the Wi-Fi network you selected. It may take about a minute to connect.

